





Performing a bin change

1

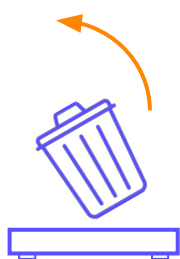

**Remove the old bin
from the system**

2

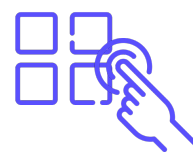


**Press
Ignore**

3



**Place the new
bin on the scale**

4

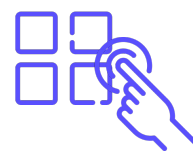

**Confirm
Bin Change**

Note

If you're using a Winnow Vision system, please make sure the bin is placed right under the camera and not touching the wall. This is to make sure you have good-quality images.