



Throw & Go | Touchless waste recording



Note

If no items of food are left to throw away, either walk away or press confirm on top right



Throw & Go | Correcting AI prediction

If AI prediction needs correcting:

1.

 
Select food item from top 8 items.



Stage will be automatically assigned based on menu and settings.

2.


Select correct waste stage if applicable*.

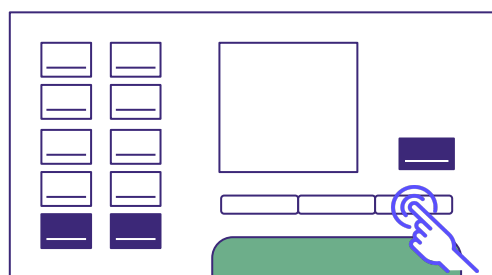

*if food item is in multiple stages.

3.

 Click **Confirm** to save record

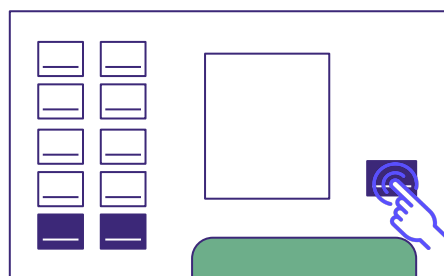

Note

If food item is not in top 8, open full menu and select item. You will then have the option to select stage.